



# OIL PUMP COMPONENTS

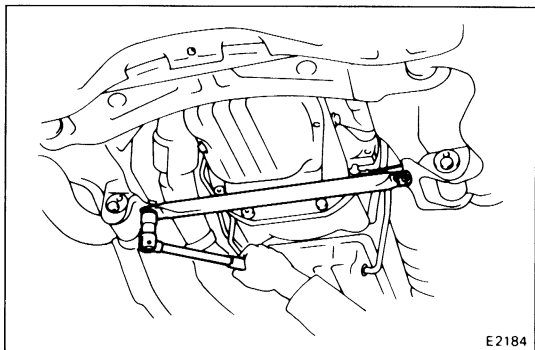

## REMOVAL OF OIL PUMP

1. REMOVE HOOD
2. REMOVE ENGINE UNDER COVER
3. DRAIN ENGINE OIL
4. (A/T)  
REMOVE A/T OIL COOLER HOSE CLAMP
5. REMOVE NO. 1 FRONT SUSPENSION CROSSMEMBER
6. REMOVE EXHAUST FRONT PIPE BRACKET AND STIFFENER PLATES
7. (7M-GTE)  
DISCONNECT ENGINE OIL COOLER HOSE FROM OIL PAN

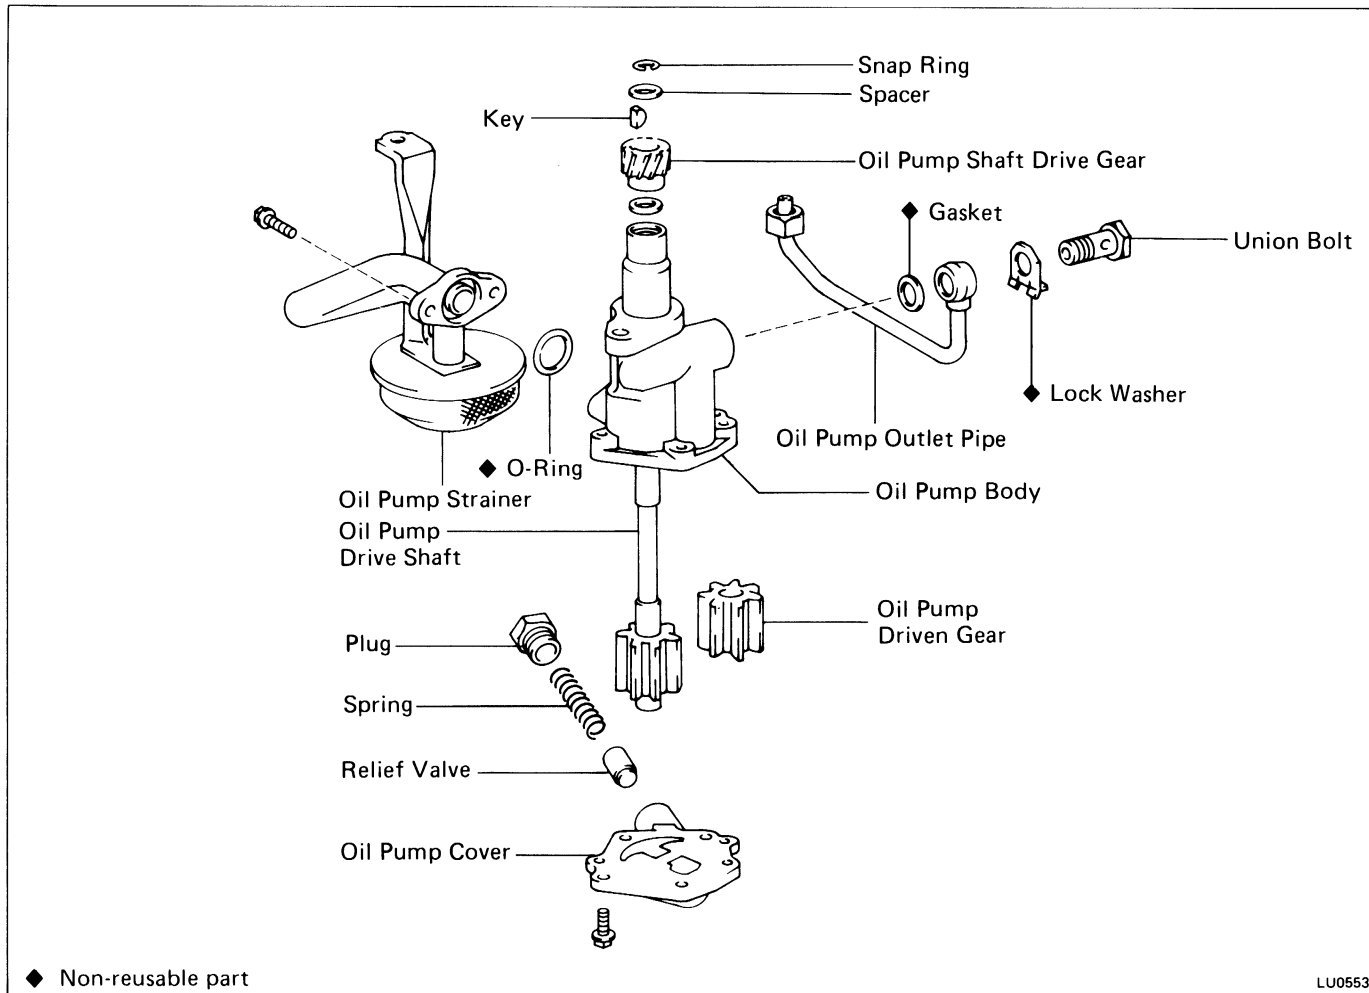